

# BSM-11:GUARDIAN



## 1. REQUIREMENTS

- Cutting board
- Box cutter/knife
- BSM-11 Guardian
- Smartphone
- Something to mark with



## 2. GETTING READY

- Remove the Guardian-pouch from the packaging
- Remove the extra included foam padding marked on the image.



## 3. REMOVING TRAY


- Remove the inner tray by gently bending the snapping finger marked on the image.



## 3. INNER TRAY

- This is what the inner tray should look like once removed.
- Please note: this is the correct position. Cut-out area on the right.



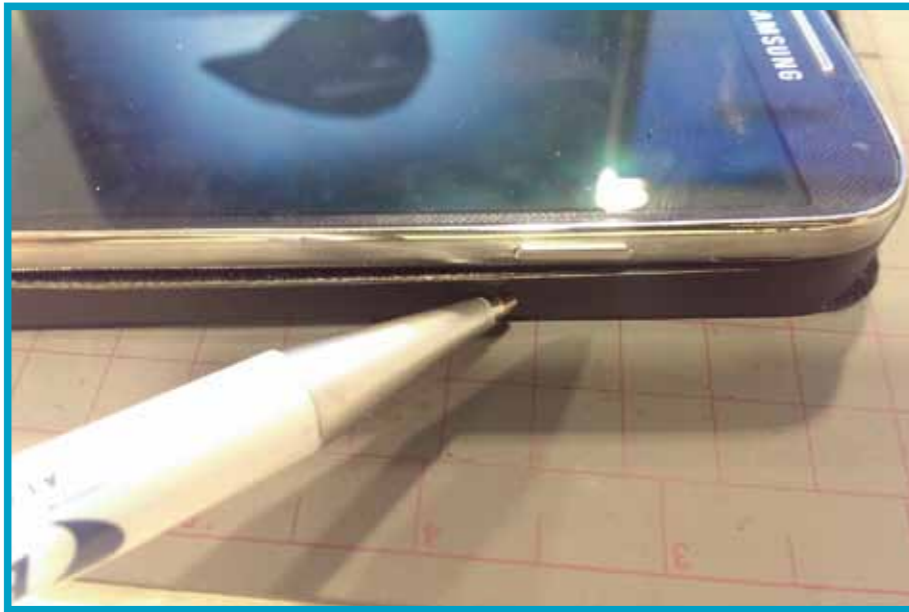

## 5. BUTTON MARKING

- Mark the area you need to cut away on the outer side of the tray, it can be slightly bigger than the actual button.
- Repeat for all the buttons you would like cut out.



## 6. UNFOLD THE TRAY

- Unfold the inner tray by un-snapping the two snapping fingers on the non-zipper side.
- Place the tray flat on your cutting board with your markings up.



## 7. CUT MARKINGS

- Follow your markings with the box cutter and remove the remaining material.
- You can cut a small hole or cut to the upper edge like shown on the left (A & B).



## 8. CHECK

- Rebuild the inner tray and place your phone.
- Check if the buttons are properly cleared. If not, repeat step 5 to 8.
- Place the inner tray back in the outer pouch.
- Enjoy your customized Guardian!

