



## BLUEPULSE+ HEART RATE SENSOR

**BBB CYCLING®**

ROOSEVELTSTRAAT 46, 2321 BM LEIDEN  
THE NETHERLANDS

**BBBCYCLING.COM**

- EN Manual
- DE Handbuch
- FR Manuel
- NL Handleiding
- ES Manual
- PT Manual
- IT Manuale

- HU Használati utasítás
  - PL Podręcznik
  - CZ Uživatelská příručka
  - JP 使用説明書
  - RU Руководство пользователя
  - SK Manuál
  - NO Håndbok
- BCP-62DB**

## QUICK START MANUAL (ENGLISH)

- EN** • Compatible with all Bluetooth 4.0 and ANT+ devices.
- DE** • Kompatibel mit allen Bluetooth 4.0 und ANT+ Geräte.
- FR** • Compatible avec tous les Bluetooth 4.0 et ANT+ dispositifs.
- NL** • Compatibel met alle Bluetooth 4.0 en ANT+ apparaten.
- ES** • Compatible con todos los Bluetooth 4.0 y ANT+ dispositivos.
- PT** • Compatível com todos os Bluetooth 4.0 e ANT+ dispositivos.
- IT** • Compatibile con tutti i Bluetooth 4.0 i ANT+ dispositivi.
- HU** • Kompatibilis az összes Bluetooth 4.0 és ANT+ eszközök.
- PL** • Kompatybilny ze wszystkimi Bluetooth 4.0 oraz ANT+ urządzeniami.
- CZ** • Kompatibilní se všemi Bluetooth 4.0 a ANT+ zařízení.
- JP** • 全てのBluetooth 4.0とANT+規格に対応。
- RU** • Совместим со всеми Bluetooth 4.0 и ANT+ устройств.
- SK** • Kompatibilný so všetkými Bluetooth 4.0 a ANT+ zariadenie.
- NO** • Kompatibelt med alle Bluetooth 4.0 og ANT+ enheter.

SCAN TO FIND OUT MORE!



[BBBCYCLING.COM/APP/APPS](http://BBBCYCLING.COM/APP/APPS)

### HEART RATE SENSOR

The heart rate sensors are integrated in the soft elastic belt. For a correct heart rate measurement, the belt must be positioned slightly below your chest, directly on your skin. Make the two contact areas moist before you start your exercise. The chest belt needs to be snug to stay in place. Slide the buckles to adjust the length of the belt for a snug but comfortable fit. Press the transmitter to the elastic belt on the two push-button connectors.

### MAINTENANCE

Remove the transmitter from the elastic belt after every use and dry the push-buttons connectors on the transmitter. Rinse the soft elastic belt under running water after every use. Wash the elastic belt regularly in a washing machine at 30°C. Use a washing pouch.

Do not spin-dry, iron, dry clean or bleach the elastic belt. Do not use detergent with bleach or fabric softener. Never put the transmitter in the washing machine!

BBB has no responsibility for misprints or changed technical content.

