



BLUEPULSE HEART RATE SENSOR

BBBCYCLING.COM

© BBB CYCLING
Rooseveltstraat 46
Leiden, The Netherlands

- | | |
|-----------------------|------------------------------------|
| EN Manual | HU Használati utasítás |
| DE Handbuch | PL Podręcznik |
| FR Manuel | CZ Uživatelská příručka |
| NL Handleiding | JP 使用説明書 |
| ES Manual | RU Руководство пользователя |
| PT Manual | SK Manuál |
| IT Manuale | NO Håndbok |

BCP-62

QUICK START MANUAL (ENGLISH)

- | | |
|--|---|
| EN Heart rate sensor
• Compatible with all Bluetooth 4.0 devices. | HU Pulzszám mérő szenzor
• Kompatibilis az összes Bluetooth 4.0 eszközök. |
| DE Herzfrequenz-Sensor
• Kompatibel mit allen Bluetooth 4.0 Geräte. | PL Zestaw nadajnika pulsu
• Kompatybilny ze wszystkimi Bluetooth 4.0 urządzeniami. |
| FR Capteur cardio
• Compatible avec tous les Bluetooth 4.0 dispositifs. | CZ Čidel pro měření srdeční frekvence
• Kompatibilní se všemi Bluetooth 4.0 zařízení. |
| NL Hartslag sensor
• Kompatibel met alle Bluetooth 4.0 apparaten. | JP ハートレートセンサーセット
• 全てのBluetooth 4.0規格に対応。 |
| ES Sensor de pulsómetro
• Compatible con todos los Bluetooth 4.0 dispositivos. | RU Комплект для передачи пульса
• Совместим со всеми Bluetooth 4.0 устройств. |
| PT Sensor de frequência cardíaca
• Compatível com todos os Bluetooth 4.0 dispositivos. | SK Senzor tepu srdca
• Kompatibilný so všetkými Bluetooth 4.0 zariadenie. |
| IT Fascia cardio
• Compatibile con tutti i Bluetooth 4.0 dispositivi. | NO Pulsmåler sensorsett
• Kompatibelt med alle Bluetooth 4.0 enheter. |

HEART RATE SENSOR

The heart rate sensors are integrated in the soft elastic belt. For a correct heart rate measurement, the belt must be positioned slightly below your chest, directly on your skin. Make the two contact areas moist before you start your exercise.

The chest belt needs to be snug to stay in place. Slide the buckles to adjust the length of the belt for a snug but comfortable fit. Press the transmitter to the elastic belt on the two push-button connectors.

Maintenance

Remove the transmitter from the elastic belt after every use and dry the push-buttons connectors on the transmitter. Rinse the soft elastic belt under running water after every use. Wash the elastic belt regularly in a washing machine at 30°C. Use a washing pouch.

Do not spin-dry, iron, dry clean or bleach the elastic belt. Do not use detergent with bleach or fabric softener. Never put the transmitter in the washing machine!

BBB has no responsibility for misprints or changed technical content.

SCAN TO FIND OUT MORE!



BBBCYCLING.COM/APP/APPS

