

AFTERMARKET-SETS: **JARIFA² / AVENTURA²**

EN/ FITTING THE LUGGAGE RACK AND MUDGUARDS

VERSION 1 | 07.02.2020

#RIDEBEYOND

ENGINEERED IN GERMANY
SINCE 1993

SMART
PERFORMANCE
BIKES










This instruction sheet will show you how to fit your aftermarket set luggage rack and mudguard to your Focus bike. If you have any questions about the set or installing it, please feel free to contact our Aftersales Services. They can be reached on 04471/966-250.

I. Aftermarket set overview

Jarifa ² / Aventura ²	Mudguard set (front & rear)	AM140119504	KD140120999	Mudguard, bolts
	Luggage rack set	AM130120502	KD130120999	Luggage rack, bolts

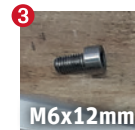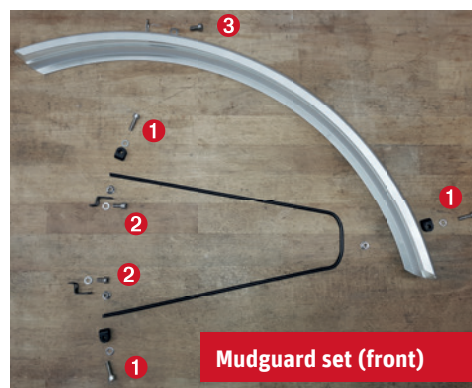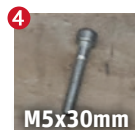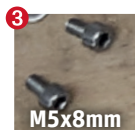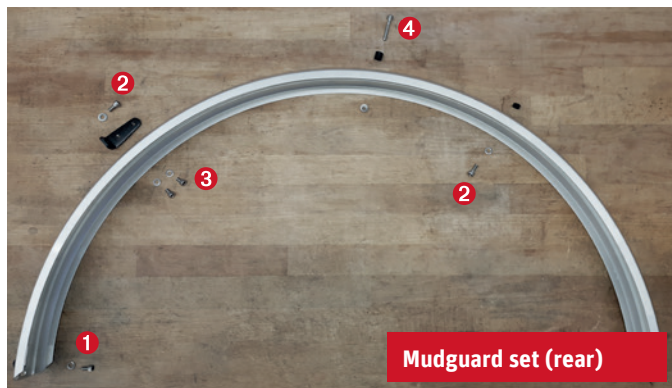

II. Fitting the aftermarket set

II.I Tools

- Cordless screwdriver
- Drill, HSS 6mm
- Ball peen hammer
- Centre punch
- 3mm Allen key
- 4 mm Allen key
- 5 mm Allen key
- 6 mm Allen key
- Open-end spanner
- Wire cutter (diagonal) or hacksaw
- File
- Screwdriver

II.II Mounting the luggage rack and mudguard over the rear wheel



- 1** Secure the bicycle upside down on the mounting stand.



- 2** Remove the rear wheel.



- 3** Mount the luggage rack on the dropouts using the M5x18mm bolts and standard M5 nuts provided and a 4mm Allen key with the prescribed tightening torque.





- 4 First fit the rear-wheel mudguard using a 4mm Allen key and the M5x10mm bolt and plain washer provided **loosely** and only to a single point on the engine mount.



- 5 Fit the bracket **loosely** to the mudguard and seat stay using the M5x12mm nut and bolt. Secure the bolts using medium strength.



- 6 Fit the mudguard to the remaining mounting points on the luggage rack **loosely** using the bolts, washers and spacer sleeves provided for this purpose.



- 7 Reinstall the rear wheel.



- 8 Remove the bicycle from the mounting stand.



- 9 Align the luggage rack. Use a spirit level if necessary.



- 10** Mark the top of the two holes of the loosely mounted bracket using a sharp object (such as a screwdriver).



- 11** Remove the rear wheel again.



- 12** Remove the luggage rack and mudguard.



- 13** Centre-punch the previously applied markings and drill out using a cordless screwdriver and drill bit (HSS 6mm).



- 14** Re-install the luggage rack and mudguard and bolt these to the bracket.



- 15** Tighten all of the threaded connections with the prescribed torque.



II.III Secure the mudguard over the front wheel





- ❶ Secure the bicycle upside down on the mounting stand.




- ❷ If necessary, remove any plugs from the mudguard holder.



- ❸ Fit the bracket to the mounting using the bolts and washers provided for this purpose.

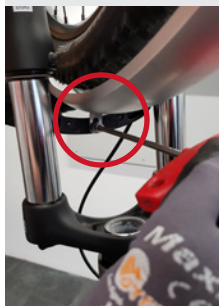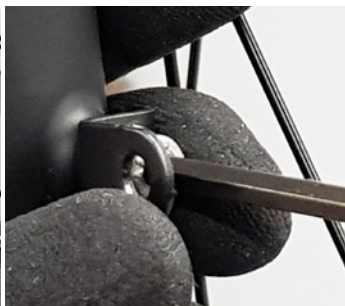

- ❹ Fit the mudguard to the fork bridge.

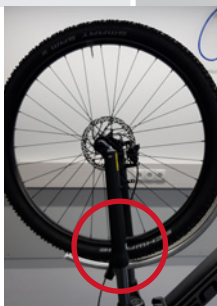

- ❺ Slide strut fixtures onto the mudguard stays.



- ❻ Fit the mudguard stays to the mudguard.



- 7 Hold the strut fixtures to the bracket and mark the stays at the desired connection point using a sharp object.




- 8 Cut the stay using a diagonal cutter or hacksaw and deburr.



- 9 Fit the stay to the bracket.



- 10 Tighten all threaded connections with the prescribed tightening torque.

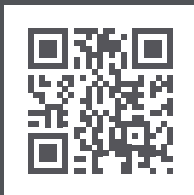

www.focus-bikes.com

DERBY CYCLE WERKE GMBH

Siemensstraße 1-3
49661 Cloppenburg, Germany
+ 49 (4471) 966-0

info@derby-cycle.com
www.derby-cycle.com

© Copyright, reprinting, reproduction and distribution, even in part, are allowed only with the permission of Derby Cycle Werke GmbH.
Subject to misprints, errors and technical alterations.

1973K0021018